

If the VN2000 VNC or VNF meter was previously installed, then removed, replace the O-rings before reinstalling the meter. See the user manuals for meter installation procedures.

VNC O-Ring Kit PN VNA-RNG-VNC Contents

O-ring, ethylene propylene with 90 durometer (quantity 2)	22650-078
Silicone grease	68559-001

VNF O-Ring Kit PN VNA-RNG-VNF Contents



O-ring, ethylene propylene with 90 durometer (quantity 2)	22650-077
Silicone grease	68559-001

Tools Required

- Pick tool
- Wrench

Procedure

1. Remove the meter from the line.
2. Loosen the large hex nut, allowing the sensor probe to slide out of the seal assembly.
3. Use a pick tool to remove the 2 O-rings. Discard the old O-rings.
4. Apply silicone grease to the new O-rings.
5. Install the new O-rings.
6. Lubricate the shaft with silicone grease.

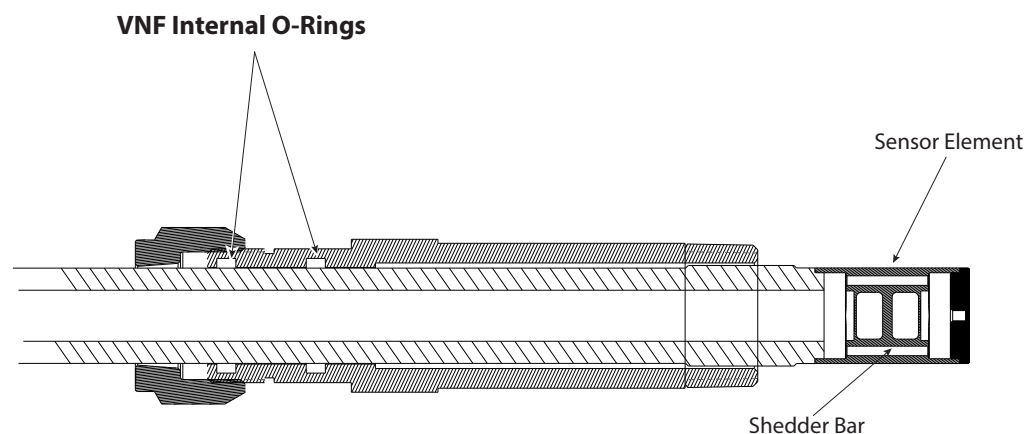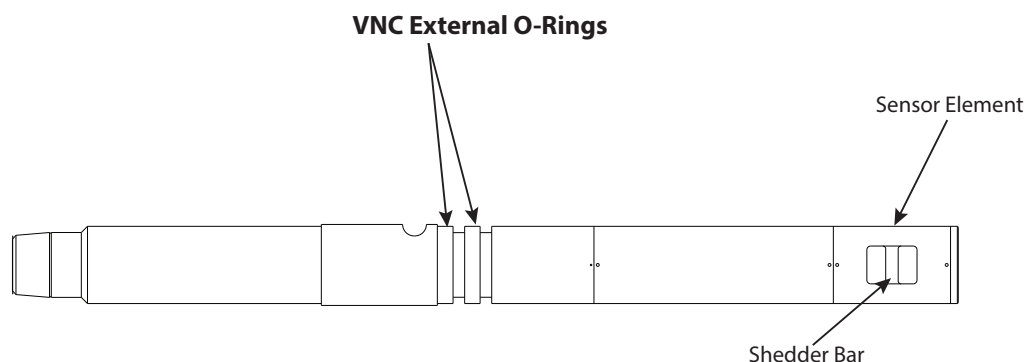

Control. Manage. Optimize.

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2022 Badger Meter, Inc. All rights reserved.

www.badgermeter.com