



Hydrogen Peroxide Monitor

Model Q45H-84

SYSTEM WITH CONTANT HEAD FLOW CELL

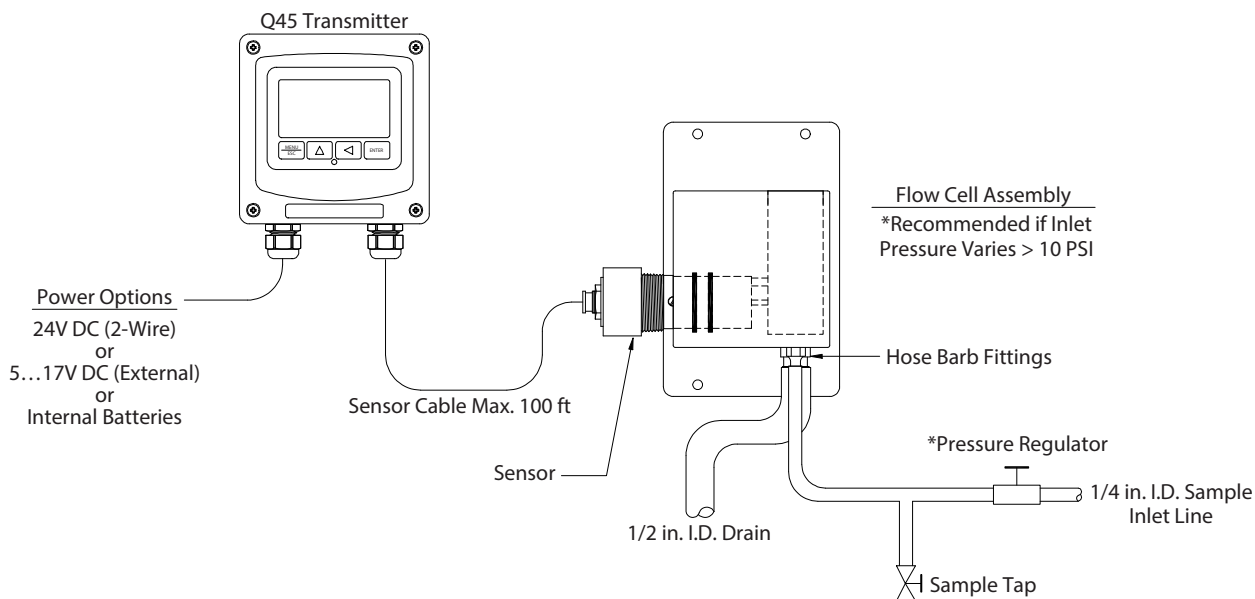


SYSTEM WITH SEALED FLOW CELL

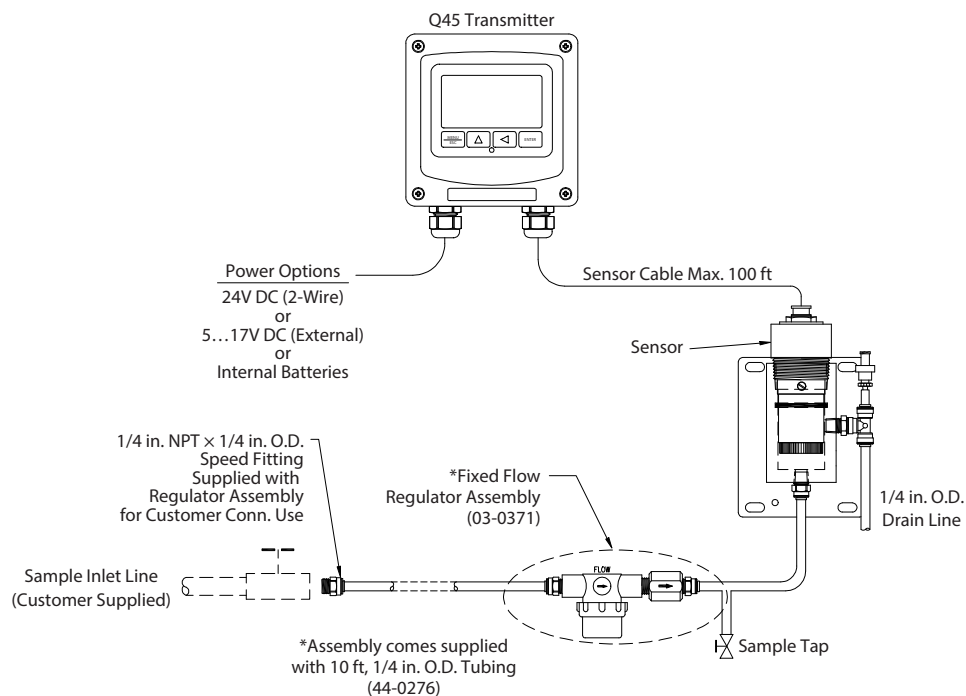


2-WIRE OR REMOTE DC MODEL


NOTE: Junction boxes have same dimensions as 2-wire transmitter.

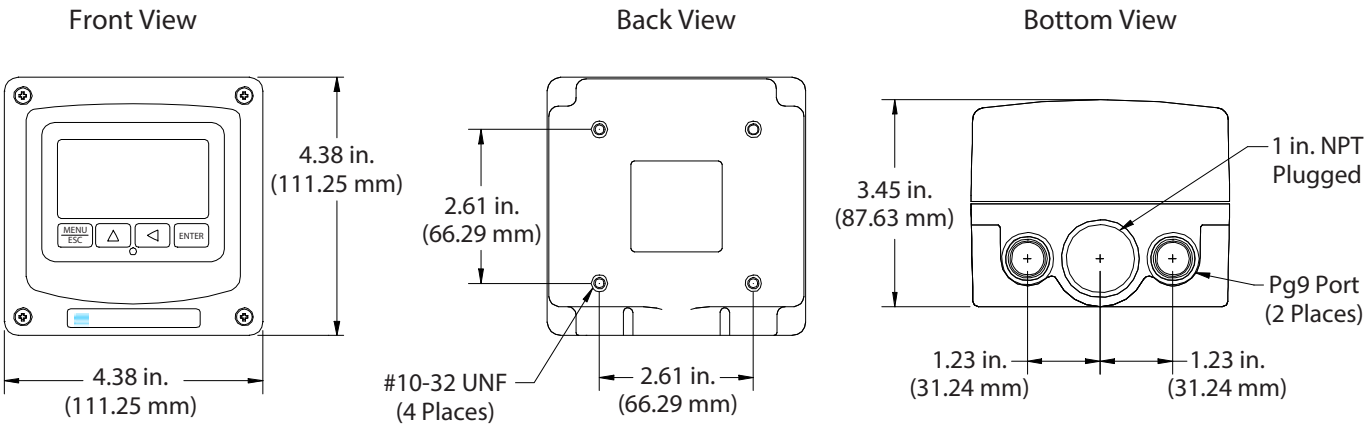

INTERNAL BATTERY MODEL

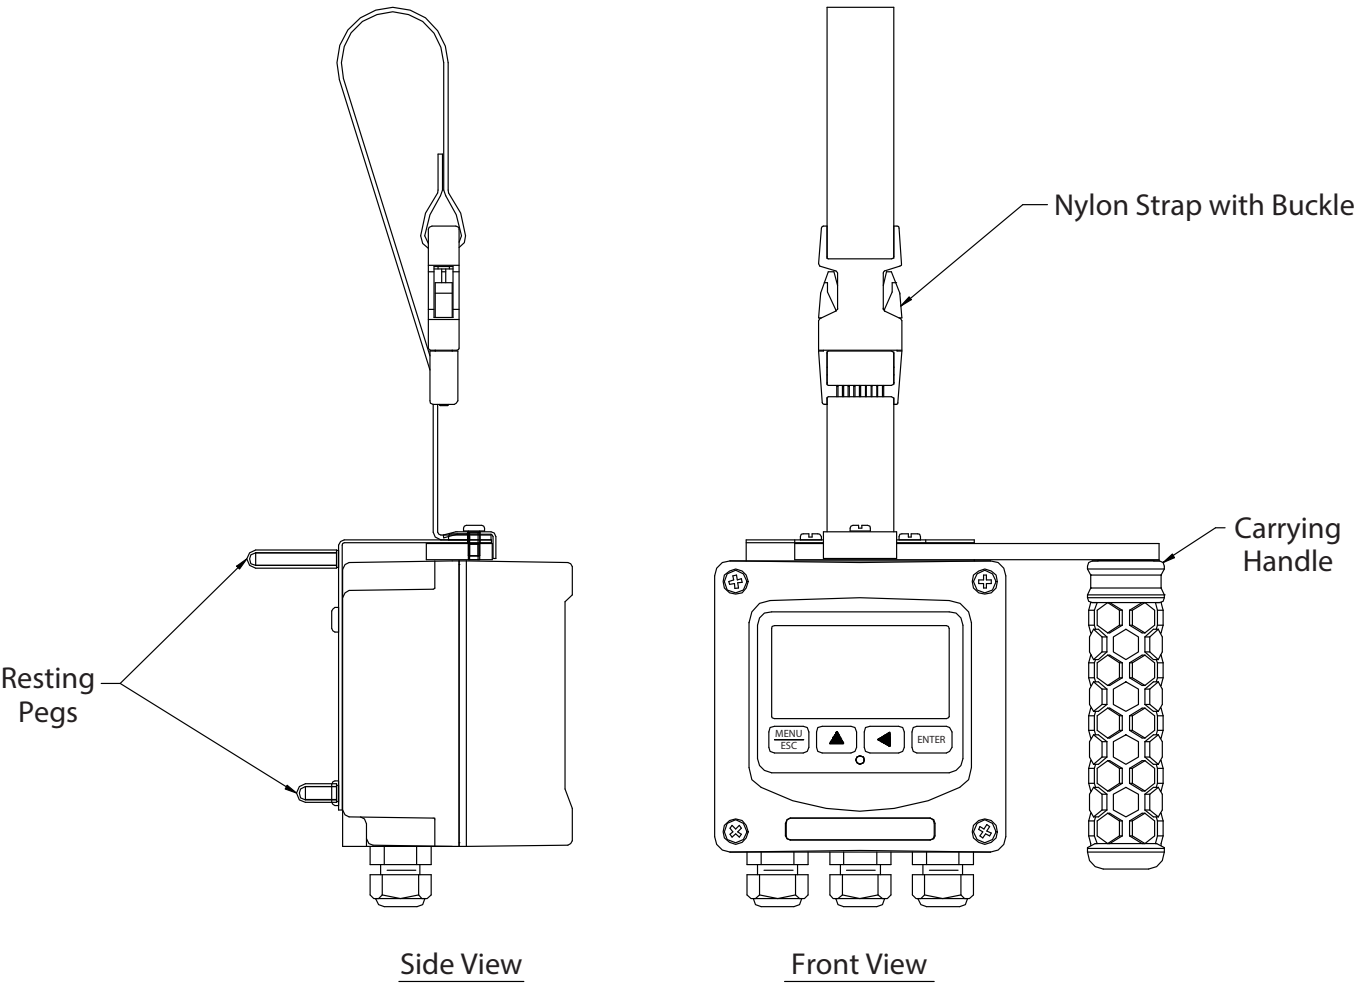


WALL MOUNTING

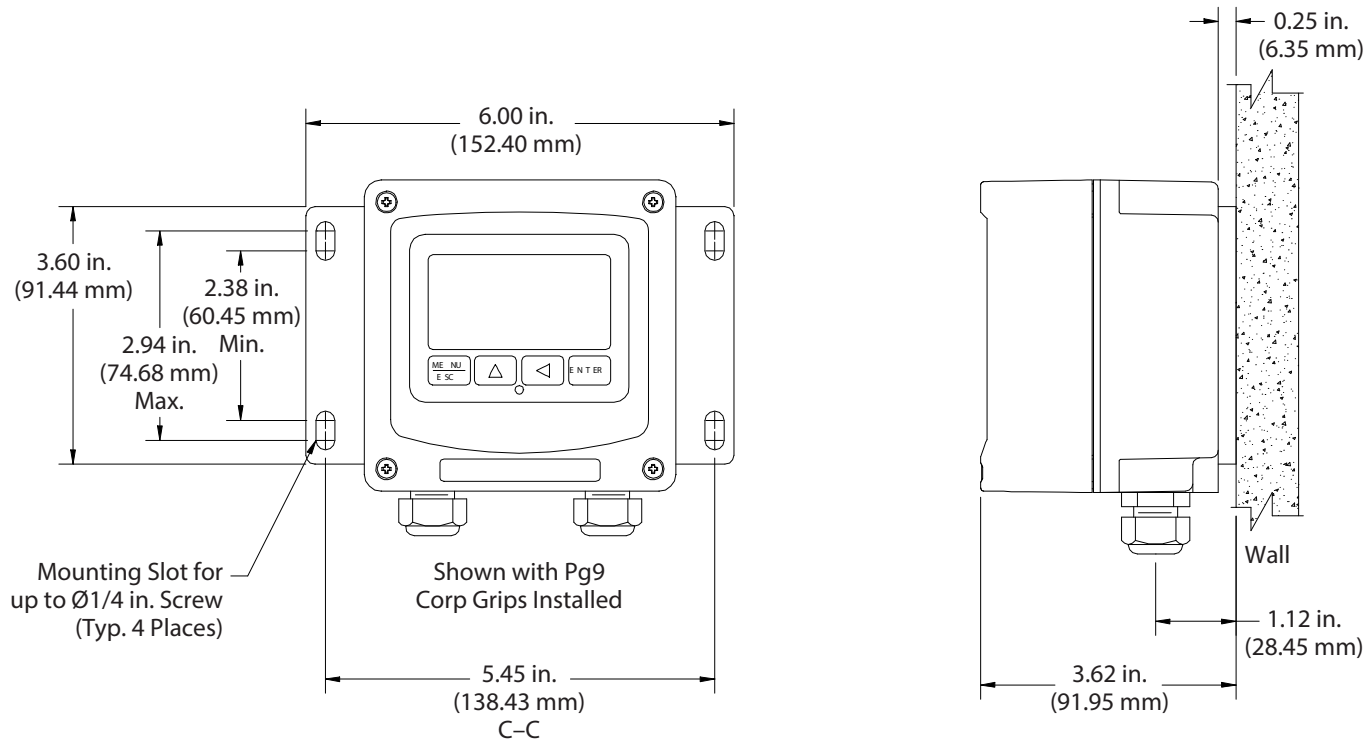


PIPE MOUNTING

NOTE: Plate may be turned 90° for vertical pipe mounting.

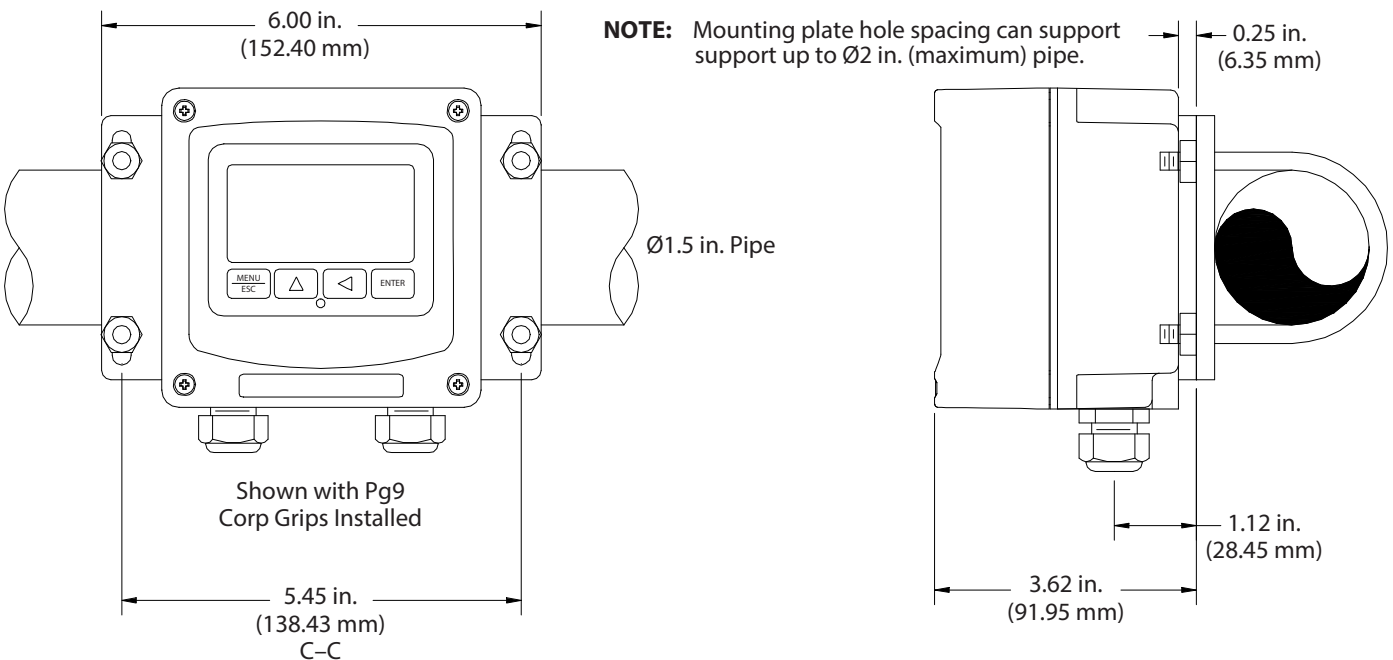


INTERNAL BATTERY CONFIGURATION

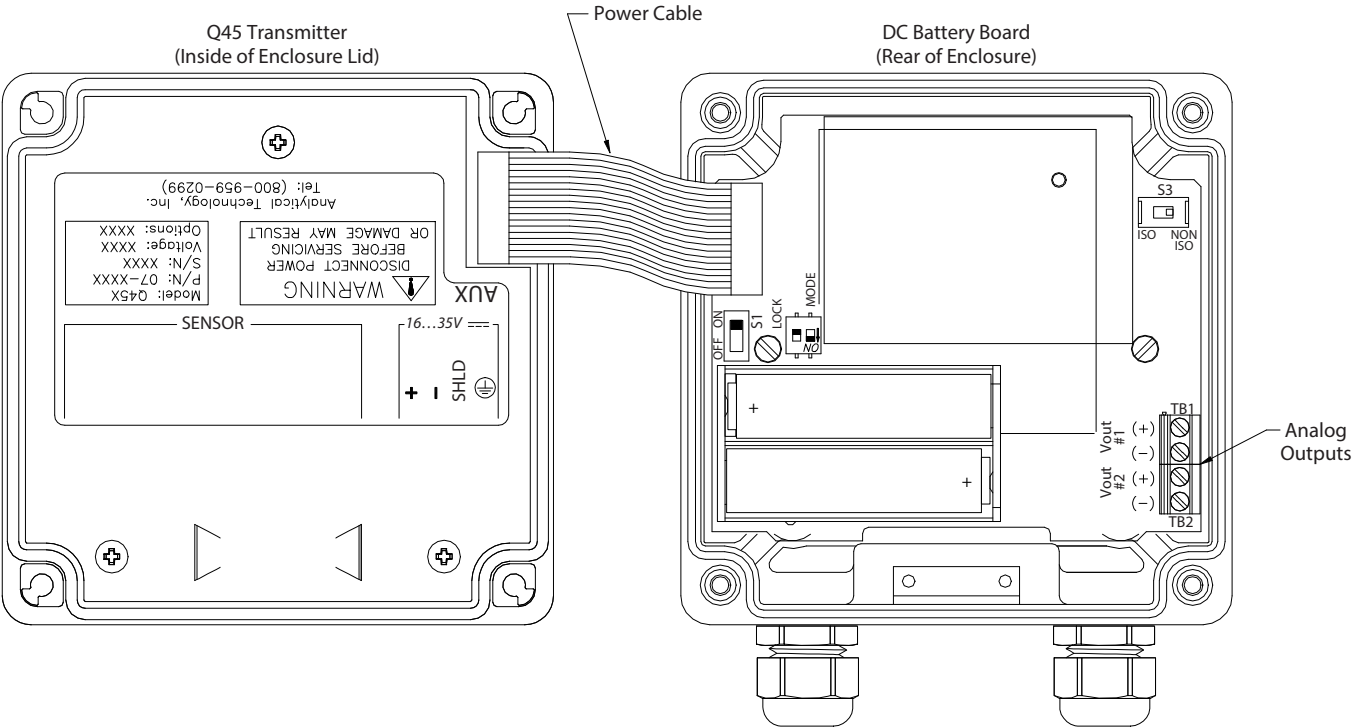


FLOW SENSOR DIMENSIONS AND OVERFLOW CELL INSTALLATION

NOTE: Connector is not submersible.

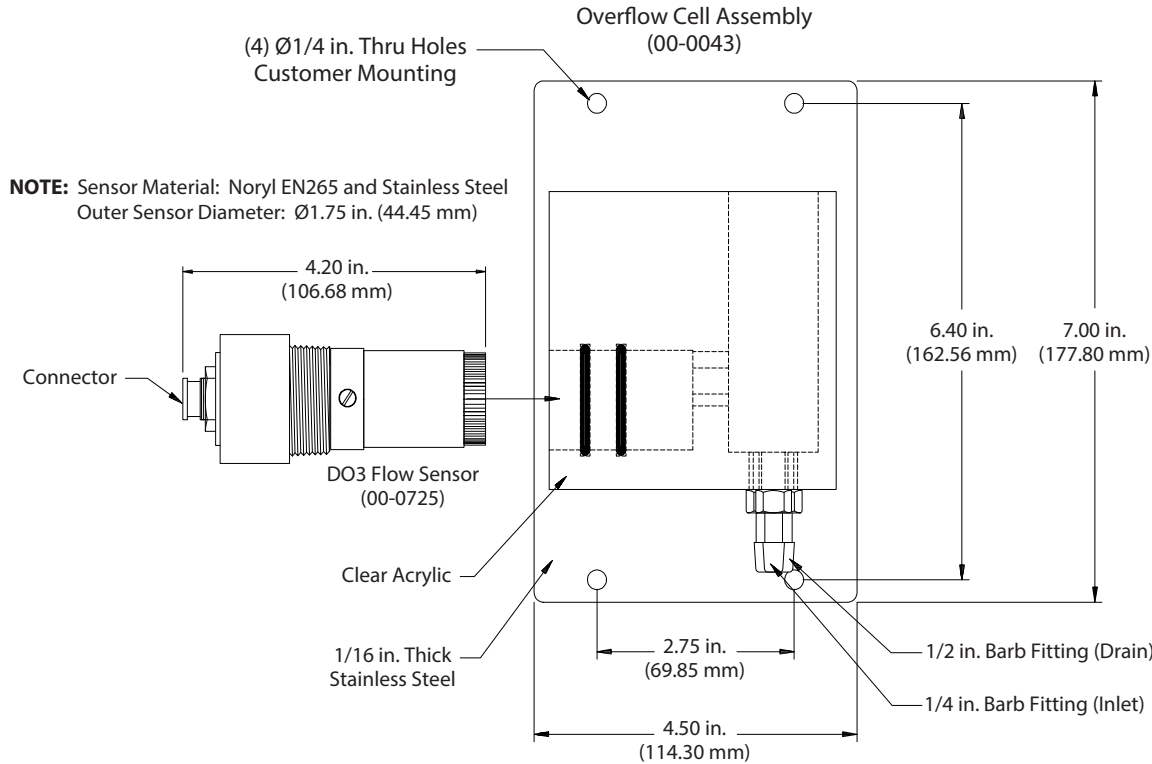


SEALED FLOW CELL ASSEMBLY (00-1522) DIMENSIONS

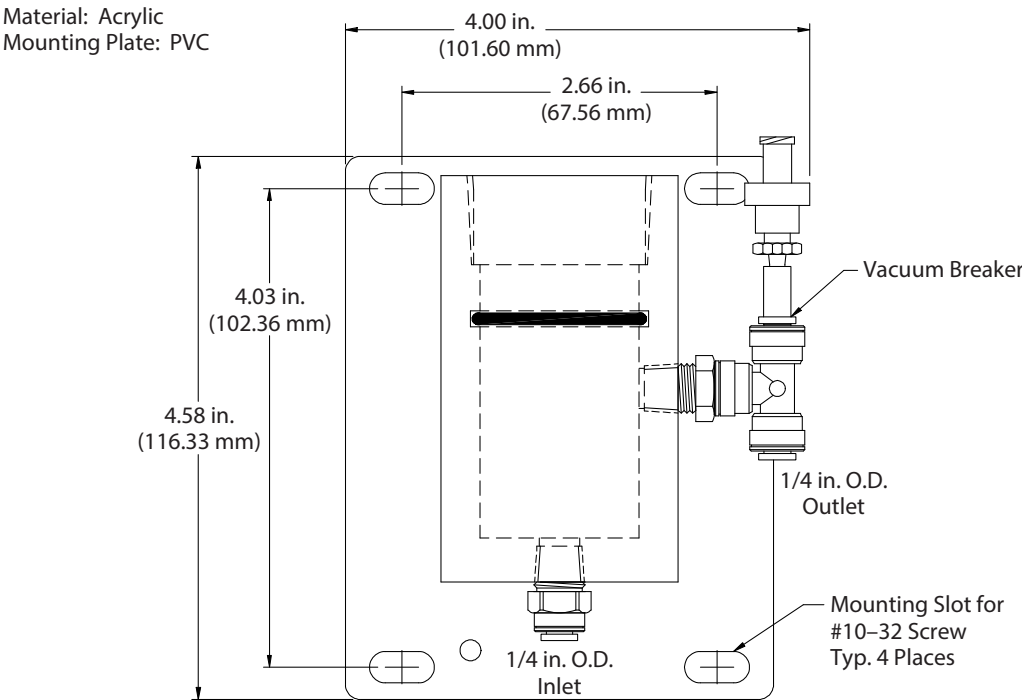

2-WIRE TRANSMITTER ELECTRICAL CONNECTIONS

NOTE: Voltage between Terminals 8 and 9 MUST be between 16...35V DC.

NOTE: Earth ground into Terminal 11 is highly recommended. This connection can greatly improve stability in electrically noisy environments.

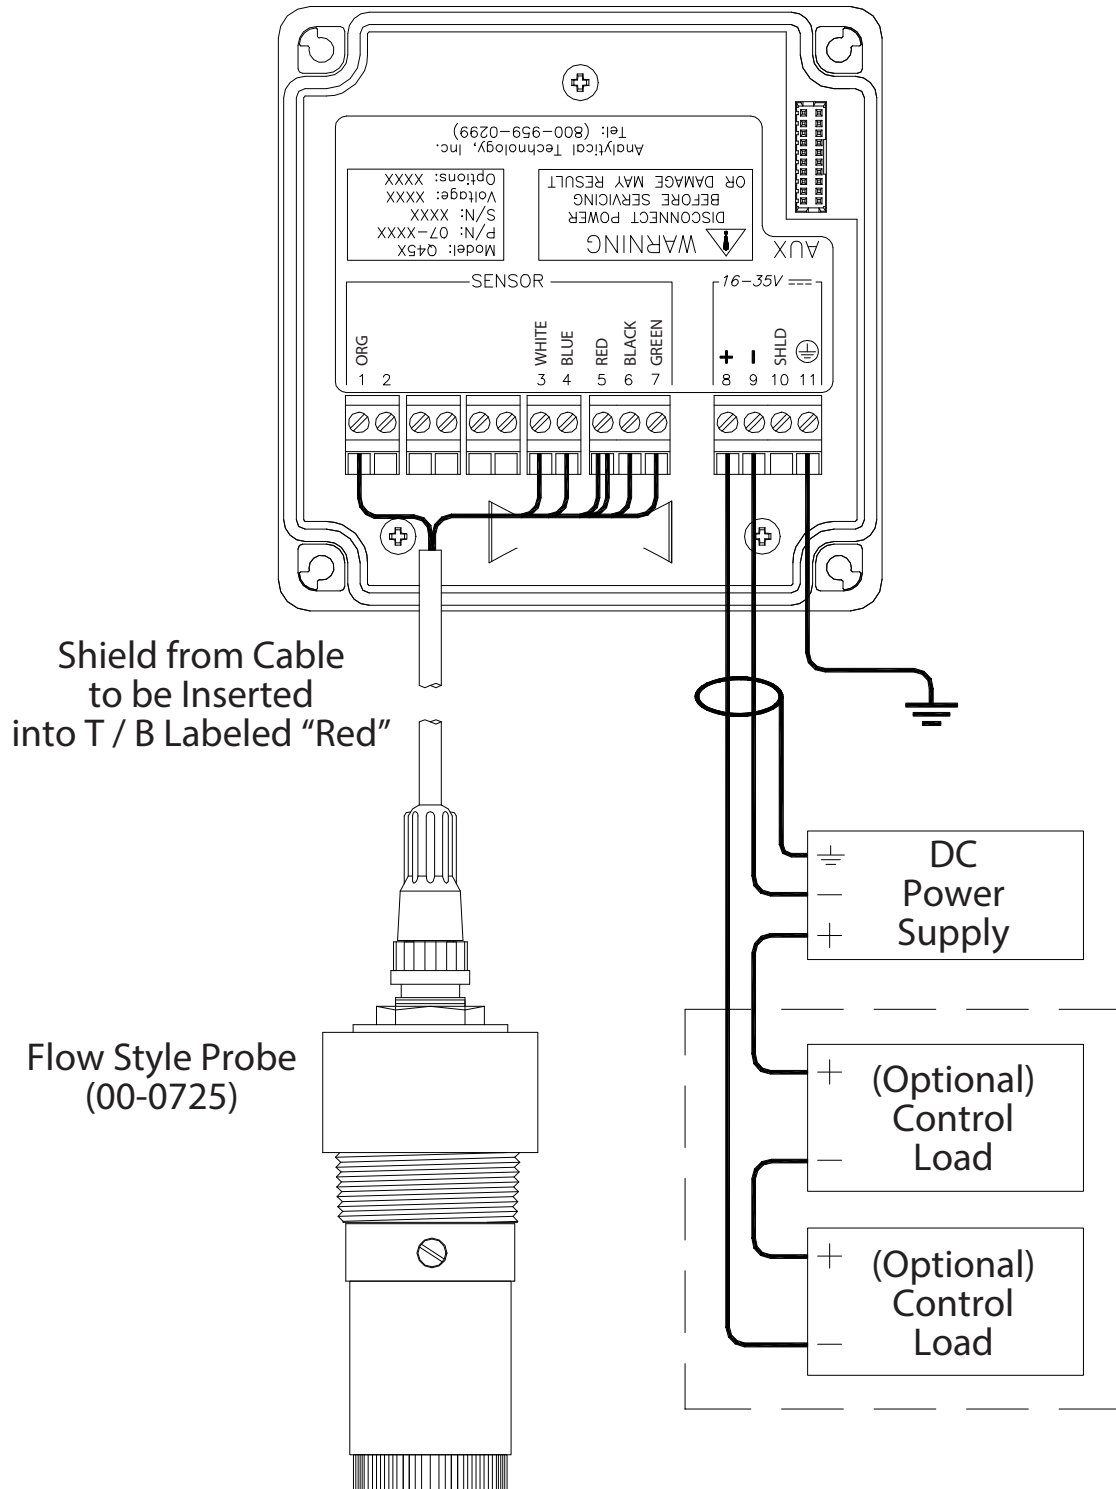

REMOTE JUNCTION BOX SENSOR CONNECTIONS

