


# SWING GATE OPERATOR COVER REMOVAL AND INSTALLATION (WITH OR WITHOUT DOOR)

Use the following procedure to remove and replace a LiftMaster Swing Gate Operator cover:

### WARNING

Failure to follow the instructions in Step 1 may cause injury due to unexpected gate movement. Always wait one minute after power-off to service the gate.

1. **Turn off power to the gate operator at the circuit breaker and wait for one minute.** The gate will move after one minute if system has the Power Fail Option.
2. When you are certain that the gate will not move due to Power Fail Option operation:
  - A) Disconnect the Drag Link from the gate Anchor.
  - B) Loosen the locking nut and mounting bolt, then remove the Swing Arm Cap Assembly and Drag Link Assembly from the drive shaft. Set this assembly aside.
3. Remove the four cover mounting bolts and remove the gate operator cover.
4. **If new cover has optional door:** Remove the two top mounting screws from the control box clear plastic cover. **NOTE:** These screws must be removed or the control box clear plastic cover cannot be removed through the gate operator cover door.
5. Install the new gate operator cover and secure with mounting hardware.
6. Reinstall the Drag Link, Swing Arm and Swing Arm Cap Assemblies.
7. Turn on power to the gate operator at the circuit breaker.

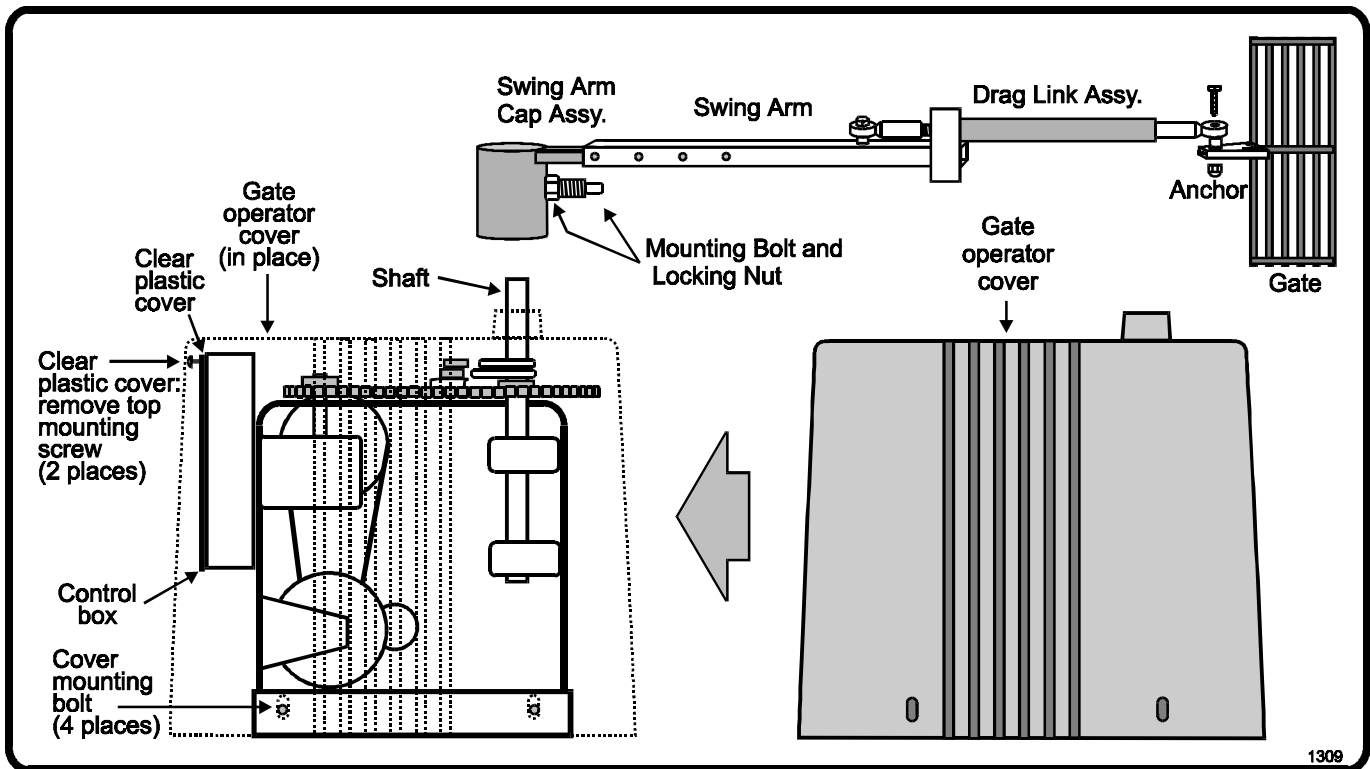

Swing Gate Cover Removal and Installation.

---

---

CHAMBERLAIN®

**LiftMaster®**  
**PROFESSIONAL**

COPYRIGHT© 2001  
ALL RIGHTS RESERVED

This document is protected by copyright and may not be copied or adapted without the prior written consent of LiftMaster. This documentation contains information proprietary to LiftMaster and such information may not be distributed without the prior written consent of LiftMaster. The software and firmware included in the LiftMaster product as they relate to this documentation are also protected by copyright and contain information proprietary to LiftMaster.

**FOR TECHNICAL SUPPORT**

Call our toll free numbers:

**(800) 323-2276**  
**(800) 998-9197**

Installation and service information is available six days a week.

**TO ORDER REPAIR PARTS**

Call our toll free numbers:

**(800) 528-2806**  
**(800) 998-9197**

Prepare to provide the following information when ordering repair parts:

- **Part Number**
  - **Part Name**
  - **Model Number**
- 
-